

SHAD

BMW G 310 R '17 KIT TOP WOG317ST




1 262233 x1



2 303020 x4
Ø8



3 304169 x2
M8 x 50 Din 7380

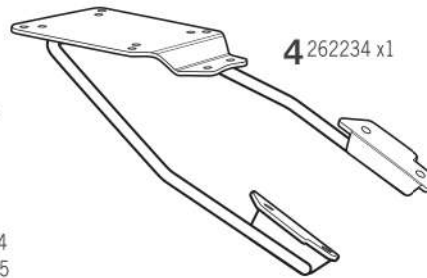

4 262234 x1



5 304171 x4
M8 x 65 Din 7380



6 303045 x6
Ø8



7 302024 x2
M8



8 304028 x2
M8 x 25 Din 7380



9 260648 x4
Ø16 Ø9 x 5



10 260596 x2
Ø16 Ø9 x 20





11 260523 x2
Ø16 Ø9 x 25

! WARNING!

- GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.
- E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.
- D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.
- I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.
- F** Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system before the top master.

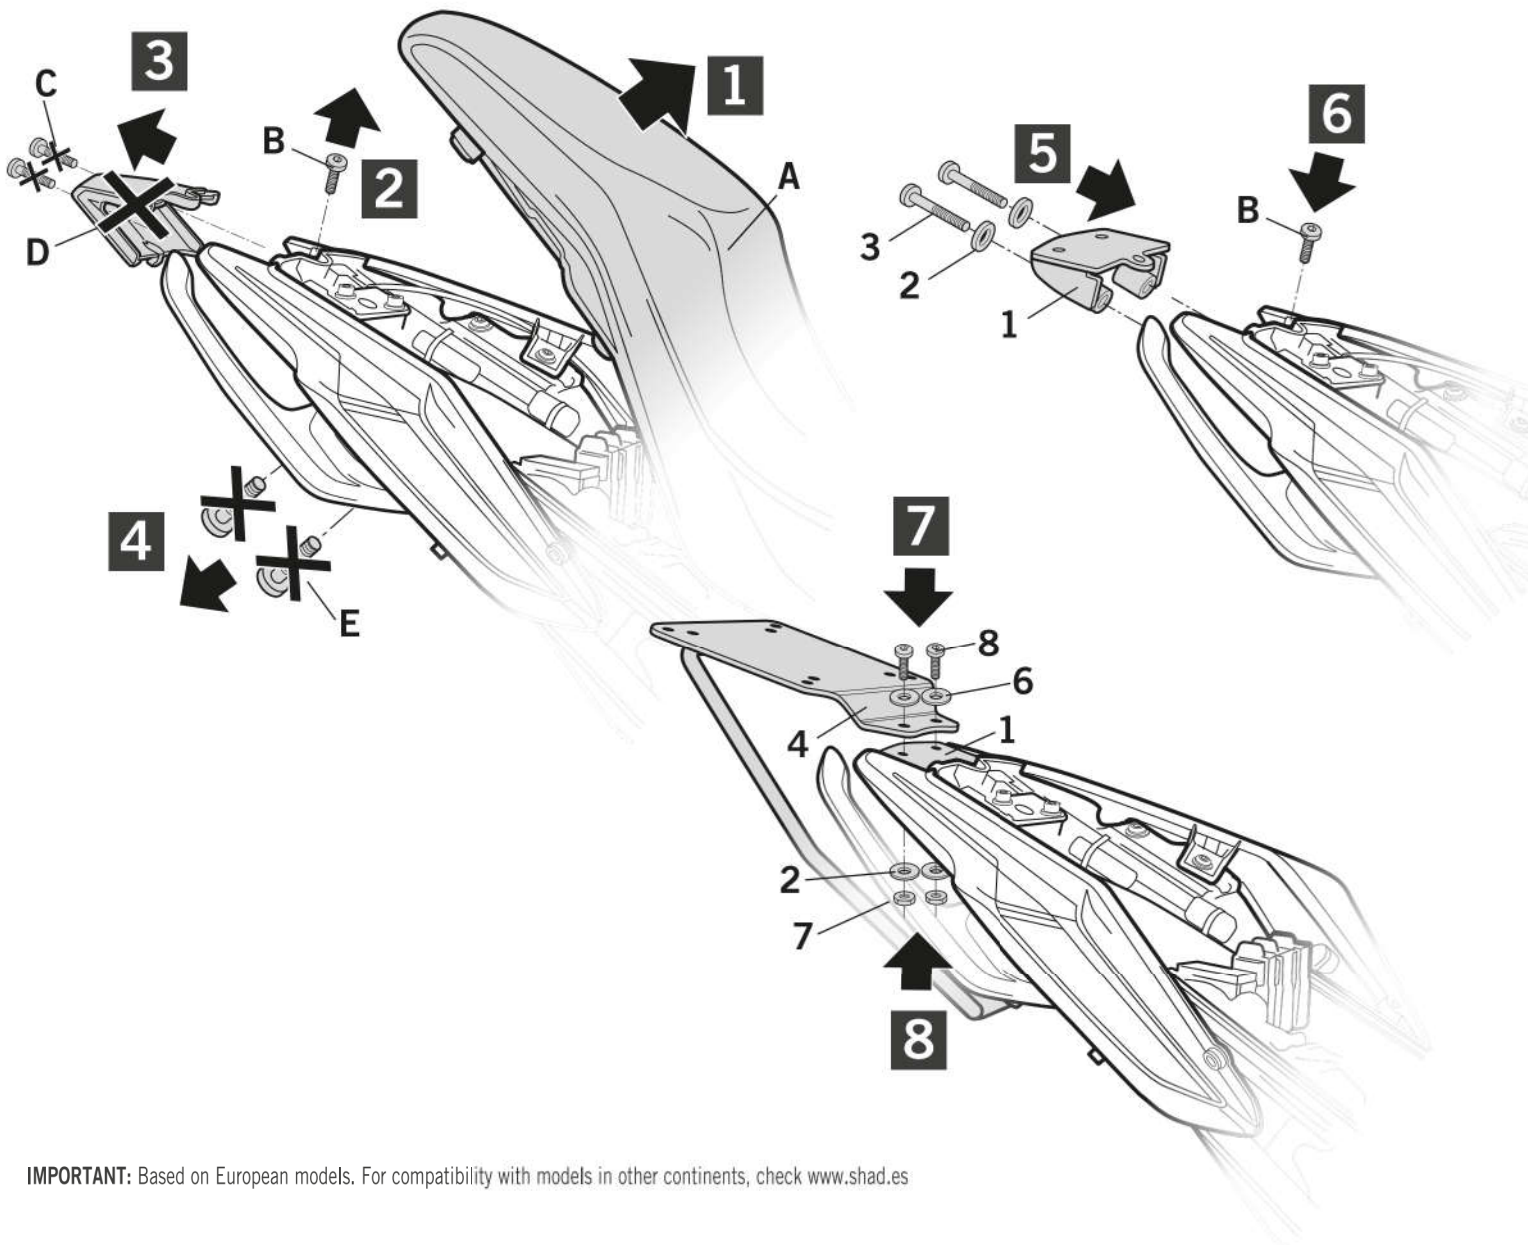

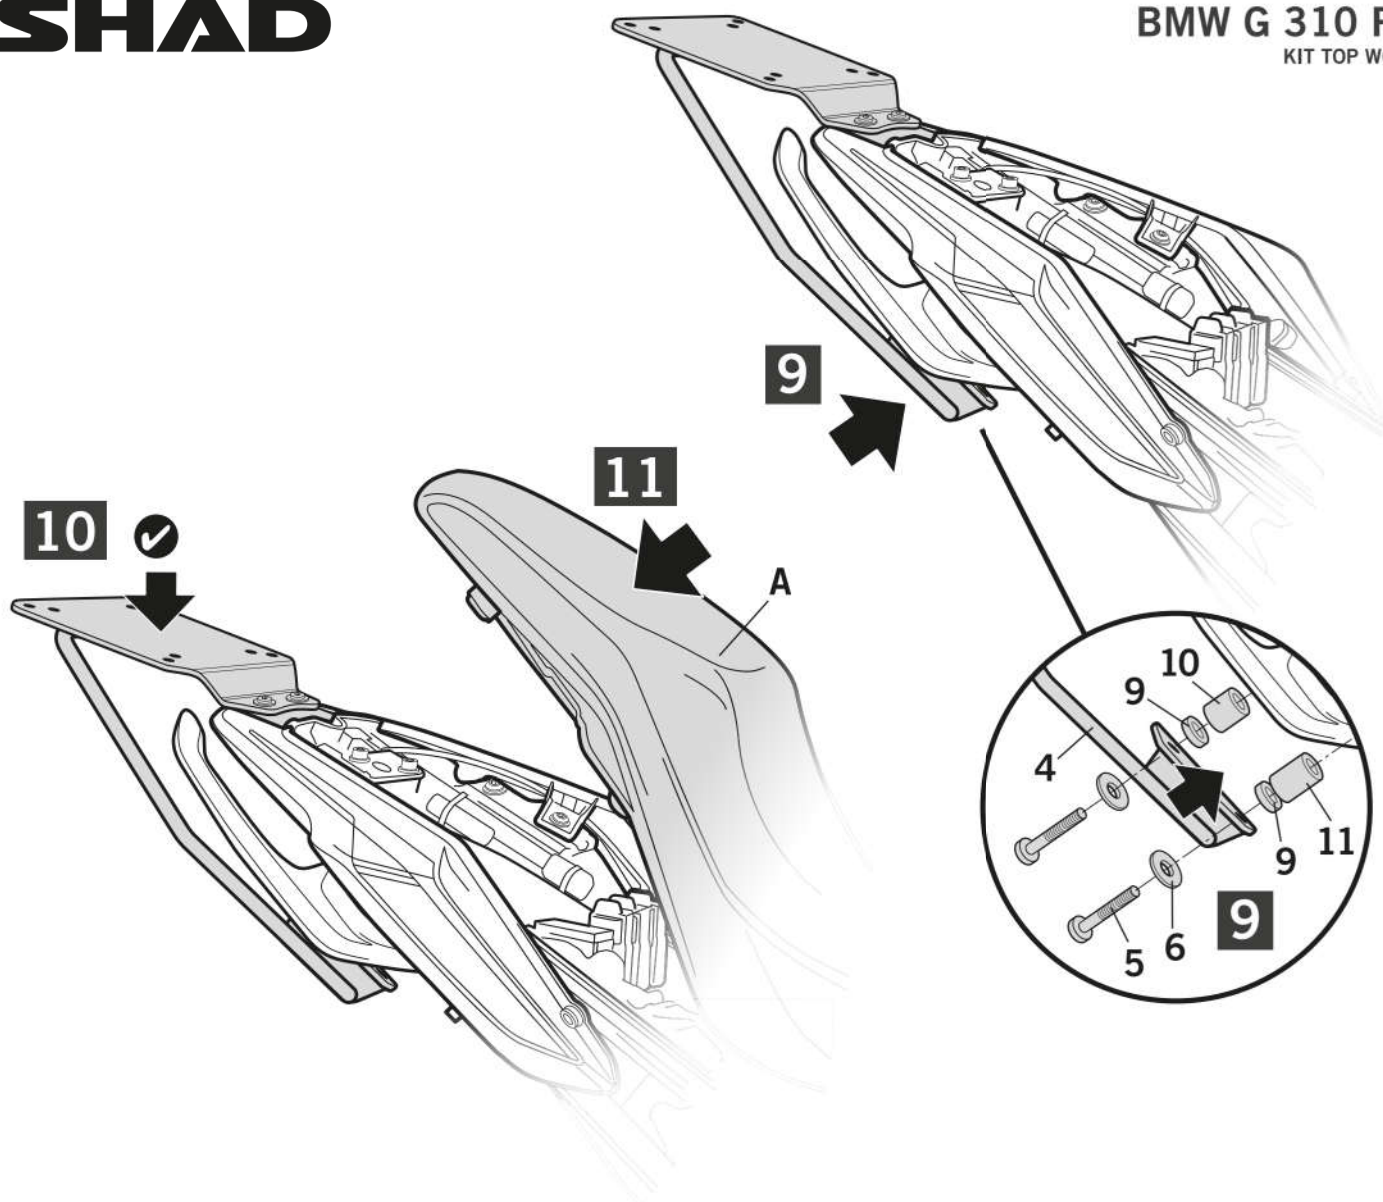

TOP MASTER
+
3P SYSTEM

